

B-CONTROL firmware update utility program 'BCUPDATE' for Windows®*

Index

Why a FIRMWARE UPDATE UTILITY?	.2
UPGRADE PROCEDURE via <u>USB</u> for Windows [®] XP	3
UPGRADE PROCEDURE via <u>USB</u> for Windows [®] 2000	4
UPGRADE PROCEDURE via <u>MIDI</u> for Windows [®] 98SE or higher	6
Can Luse the FIRMWARE UPDATE UTILITY on Mac ^{®*} and Linux ^{®*} computers?	7

Why a FIRMWARE UPDATE UTILITY?

The new 'BCUPDATE' firmware update utility program for Windows® 98SE or higher ...

- is useful for dumping **firmware updates** (no preset dumps!) from your computer to the B-CONTROL hardware
- is more reliable than third-party MIDI dump programs
- is very easy to use
- works under Windows® 98SE or higher via a separate MIDI interface
- works with USB connection between B-CONTROL and computer
 - o under Windows® XP with the standard MIDI driver
 - under Windows[®] XP with the *new* BEHRINGER driver 'BCSETUP'
 (BC-Driver 1.1.1.0)
 - under Windows[®] 2000 with the *new* BEHRINGER driver 'BCSETUP'
 (BC-Driver 1.1.1.0)

Please note:

You have to install the new **MIDI driver 'BCSETUP' (BC-Driver 1.1.1.0)** for Windows[®] 2000 (and Windows[®] XP if you are already using the latest BEHRINGER driver v1.0.0.2) **before** using the 'BCUPDATE' firmware utility program!

UPGRADE PROCEDURE via USB for Windows® XP

Download:

- Download the ZIP folder 'Update_Utility' from our website
- Save and extract it to a 'known' location

Please note:

You have to install the new **MIDI driver 'BCSETUP' (BC-Driver 1.1.1.0)** for Windows[®] XP if you are already using the latest BEHRINGER driver v1.0.0.2 **before using the 'BCUPDATE'** firmware utility program!

Using the 'BCUPDATE' firmware update utility program:

- Copy the 'BCUPDATE' file to a known location (e.g. your desktop) so you can easily retrieve it
- Double-click on the file to open the BEHRINGER firmware dump utility
- Click 'Open'
- Browse and locate the *firmware* file that you want to dump to your B-CONTROL hardware
- · Select the desired file
- A window opens up automatically, letting you select the destination hardware port for dumping
- Make your selection and click 'OK' (or 'Cancel' to abort)
- The dump starts automatically
- Once the dump is finished, you will get a message on the board: 'Update successfully completed!'
- For dumping another file (a firmware update for another B-CONTROL), redo the steps starting with 'Open' (see above)
- To quit, click 'Exit'

Please note:

- If your hardware was not recognized or if the dump failed, press 'Rescan' and select the desired target hardware again
- For best performance, use the U-1 (USB) hardware operating mode
- In case of error messages, check for correct USB connection between B-CONTROL and your computer
- You can only dump BCR firmware files to a BCR2000, and BCF firmware files to a BCF2000!

UPGRADE PROCEDURE via USB for Windows® 2000

Download:

- Download the ZIP folder 'Update_Utility' from our website
- Save and extract it to a 'known' location

Please note:

You have to install the new MIDI driver 'BCSETUP' (BC-Driver 1.1.1.0) for Windows[®] 2000 before using the 'BCUPDATE' firmware utility program!

Using the 'BCUPDATE' firmware update utility program:

- Copy the file 'BCUPDATE' to a known location (e.g. your desktop), so you
 can easily retrieve it
- Double-click on the file to open the BEHRINGER firmware dump utility
- Click 'Open'
- Browse and locate the *firmware* file that you want to dump to your B-CONTROL hardware
- Select the desired file
- A window opens up automatically, letting you select the destination hardware port for dumping

- Make your selection and click 'OK' (or 'Cancel' to abort)
- The dump starts automatically
- Once the dump is finished, you will get a message on the board: 'Update successfully completed!'
- For dumping another file (a firmware update for another B-CONTROL), redo
 the steps starting with 'Open' (see above)
- To quit, click 'Exit'

Please note:

- If your hardware was not recognized or if the dump failed, press 'Rescan' and select the desired target hardware again
- For best performance, use the U-1 (USB) hardware operating mode
- In case of error messages, check for correct USB connection between B-CONTROL and your computer
- You can only dump BCR firmware files to a BCR2000,
- and BCF firmware files to a BCF2000!

UPGRADE PROCEDURE via MIDI for Windows® 98SE or later

Download:

- Download the ZIP folder 'Update Utility' from our website
- Save and extract it to a 'known' location

Hardware settings for MIDI (stand alone) use (all OS versions):

- 1. You need ...
 - a standard MIDI interface, connected to your computer (e.g. an external interface via USB or an internal interface on a sound card with MIDI ports)
 - a PC with Windows® 98SE, ME, NT, 2000 or XP for using the 'BCUPDATE' utility program
- 2. For MIDI (stand-alone) use you have to ...
 - Connect the B-CONTROL MIDI OUT A to your MIDI interface's MIDI IN
 - Connect the B-CONTROL MIDI IN to your MIDI interface's MIDI OUT
 - Power up your B-CONTROL
 - Select the S-4 operating mode on the B-CONTROL hardware for this application

Using the 'BCUPDATE' firmware update utility program (all Windows[®] OS with separate MIDI interface):

- Copy the 'BCUPDATE' file to a known location (e.g. your desktop) so you can easily retrieve it
- Double-click on the file to open the BEHRINGER firmware dump utility
- Click 'Open'
- Browse to locate the *firmware* file that you want to dump to your B-CONTROL hardware
- Make your selection
- A window opens up automatically, letting you select the destination hardware port for dumping

- Make your selection and click 'OK' (or 'Cancel' to abort)
- The dump starts automatically
- Once the dump is finished, you will get a message on the board: 'Update successfully completed!'
- For dumping another file (a firmware update for another B-CONTROL), redo
 the steps starting with 'Open' (see above)
- To quit, click 'Exit'

Please note:

- If your hardware was not recognized or if the dump failed, press 'Rescan' and select the desired target hardware again
- For best performance, use the S-4 MIDI stand alone mode
- In case of error messages, check for correct MIDI connection between B-CONTROL and your MIDI interface & for correct connection between your MIDI interface and your computer
- You can only dump BCR firmware files to a BCR2000, and BCF firmware files to a BCF2000!

Can I use the FIRMWARE UPDATE UTILITY on Mac® and Linux® computers?

Concluding remark:

The 'BCUPDATE' will not work with Mac[®] and Linux[®] computers; but its functionality will be integrated in our new 'B-CONTROL EDIT' software editor/librarian program, which will be soon available on our homepage.

This software will use JAVA®* as running environment and therefore it will work on <u>every</u> computer OS that supports JAVA®, i.e. Windows®, Mac®, Solaris®* and Linux®.

^{*} Software mentioned is not included. WINDOWS[®], MAC[®], LINUX[®], SOLARIS[®], JAVA[®] and their respective logos are registered trademarks of their respective owners. Their use neither constitutes a claim of the trademarks by BEHRINGER[®] nor affiliation of the trademark owners with BEHRINGER[®]. © 2004 BEHRINGER Spezielle Studiotechnik GmbH