



## Instructions for **BEHRINGER BCR2000** & 'Only Controllers' preset

### BEHRINGER BCR2000 Only Controllers

This document will give you a quick overview about the **BEHRINGER BCR2000** 'ONLY CONTROLLERS' PRESET and how to install it.

Please consider this preset merely as a starting point and as inspiration for your own imagination.

#### **Installation:**

##### **1. Open and extract the ZIP file.**

The following files are included:

- This INSTRUCTION text document (.pdf)
- SINGLE PRESET file (.syx)

##### **2. How to get the B-CONTROL PRESET from your computer into your hardware:**

- **Connect the B-Control to your computer** via USB or MIDI port (Computer MIDI OUT to B-Control MIDI IN)
- **Select the correct USB or stand alone operating mode** on the hardware (please refer to the manual for details)
- **Open the B-Control preset file with a MIDI dump program** like "MIDI-OX" or "Send SX" on your computer or use the B-CONTROL EDIT software editor, which is available free of charge at our homepage [www.behringer.com](http://www.behringer.com)
- Don't forget to **select the correct MIDI ports** into the dump software!

- **Dumping a single preset (SINGLE DUMP)**
  1. **Select the preset** ('bcr\_Only\_Controllers.syx') on your MIDI dump program
  2. **Send the preset** to the B-CONTROL and wait until completion
  3. **Push the STORE** button on the hardware
  4. **Select the desired destination** preset number
  5. **Push the STORE** button again
  6. **The preset is now saved** on your hardware
  7. Now you can dump the next preset (proceed with steps 1 thru 5 again)

**Hint:** If you do not want to overwrite one of your presets in the B-CONTROL hardware, select a vacant destination number during step 4 (e.g. preset 'P-32').

#	Name	Type	Description/Application
01	'bcr_Only_Controllers'	Single Preset	Contains all CC-commands from CC1 to CC 110 on MIDI channel 1  -> Perfect for the LEARN function in your music software studio/instrument/plug-in

**Preset Name:** BCR - Only Controllers

The diagram illustrates the layout of the BCR2000 MIDI controller. It features a main grid of 110 MIDI CC buttons, organized into 11 rows and 10 columns. The buttons are labeled as follows:

- Row 1: CC 1 (Ch. 1) to CC 8 (Ch. 1)
- Row 2: CC 9 (Ch. 1) to CC 16 (Ch. 1)
- Row 3: CC 17 (Ch. 1) to CC 24 (Ch. 1)
- Row 4: CC 25 (Ch. 1) to CC 32 (Ch. 1)
- Row 5: CC 33 (Ch. 1) to CC 40 (Ch. 1)
- Row 6: CC 41 (Ch. 1) to CC 48 (Ch. 1)
- Row 7: CC 49 (Ch. 1) to CC 56 (Ch. 1)
- Row 8: CC 57 (Ch. 1) to CC 64 (Ch. 1)
- Row 9: CC 65 (Ch. 1) to CC 72 (Ch. 1)
- Row 10: CC 73 (Ch. 1) to CC 80 (Ch. 1)
- Row 11: CC 81 (Ch. 1) to CC 88 (Ch. 1)
- Row 12: CC 89 (Ch. 1) to CC 96 (Ch. 1)
- Row 13: CC 97 (Ch. 1) to CC 104 (Ch. 1)
- Row 14: CC 105 (Ch. 1) to CC 108 (Ch. 1)

Additional features include a 'PUSH' section on the left with buttons E1-E4, a 'TURN' section with a knob, and a 'FOOTSWITCH' section on the right with buttons FS1 and FS2. A 'B-CONTROL FOOTSWITCH BCR2000' section at the bottom right contains buttons for FINE, COARSE, UP, and DOWN, along with a 'P-1' preset selector and a 'USB/MIDI CONTROLLER' label.

*Please consider this preset as a starting point  
for creating your own edits/alignments.*

© 2004 BEHRINGER Spezielle Studiotechnik GmbH