 


PRESET CONFIGURATION

BEHRINGER MIDI FOOT CONTROLLER FCB1010

press "DOWN" for 3 sec. to enter
Preset Configuration




select Switches

press "UP" to confirm



SELECT NUMBER VALUE 1 VALUE 2

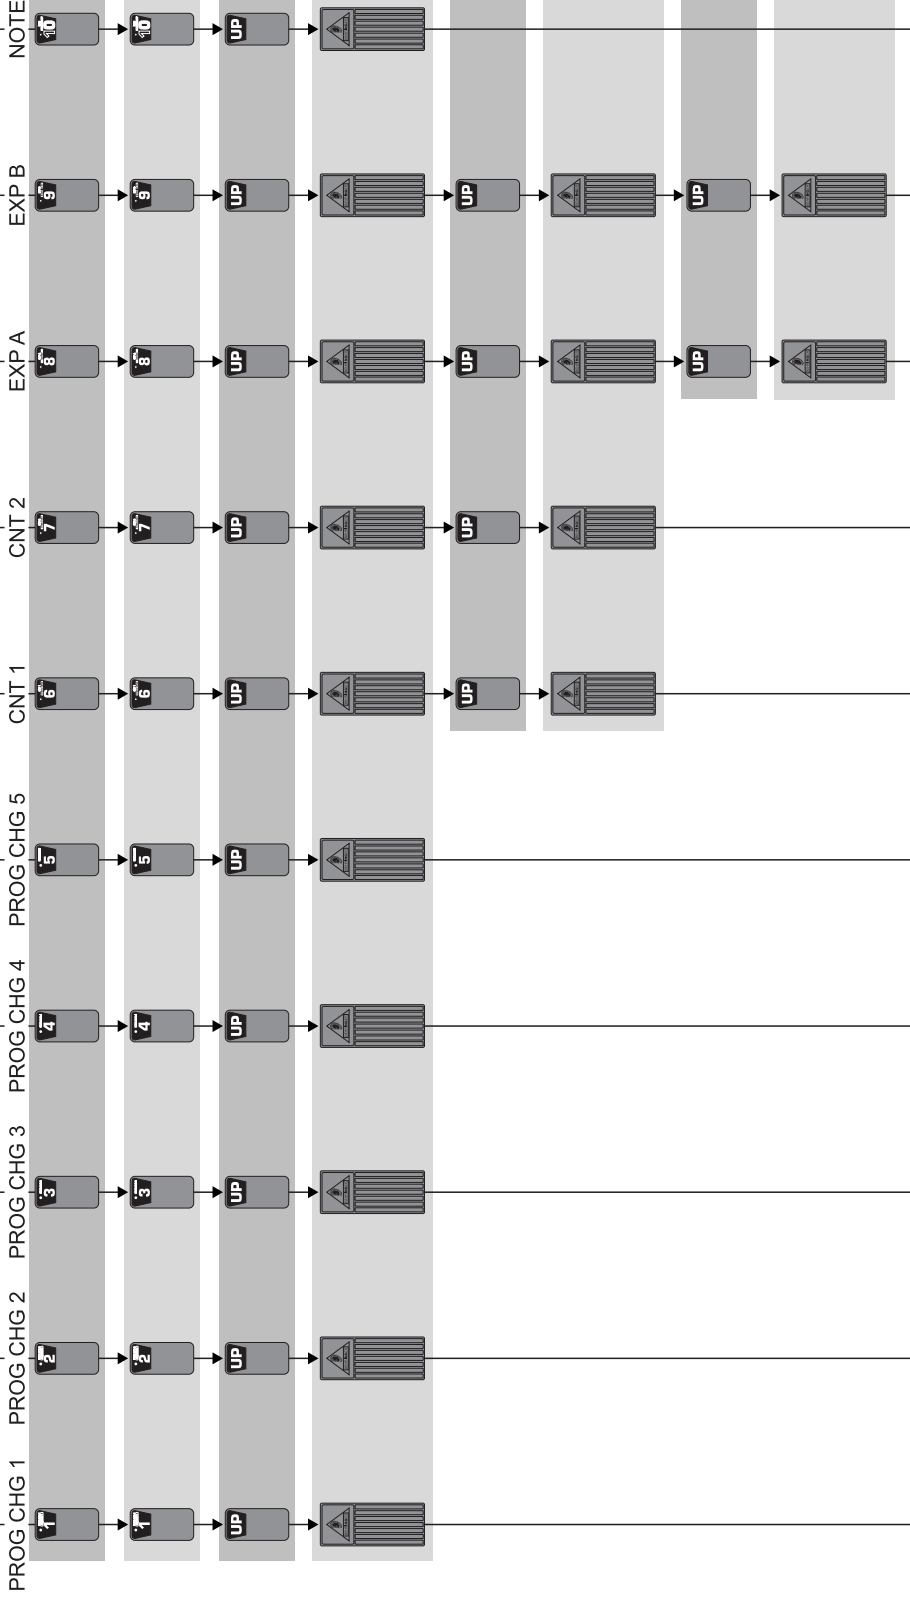

press 3 sec. to activate/deactivate

press once to select

press "UP" to confirm



SELECT NUMBER VALUE 1 VALUE 2

adjust "NUMBER" using EXP pedal A or buttons 1...10

press "UP" to confirm



SELECT NUMBER VALUE 1 VALUE 2

adjust "VALUE 1" using EXP pedal A or buttons 1...10

press "UP" to confirm



SELECT NUMBER VALUE 1 VALUE 2

adjust "VALUE 2" using EXP pedal A or buttons 1...10

press "UP" to confirm



SELECT NUMBER VALUE 1 VALUE 2

press "DOWN" for 3 sec. to store preset



SELECT



GLOBAL CONFIGURATION BEHRINGER MIDI FOOT CONTROLLER FCB1010

